


# Adirondack Chair Exploded View

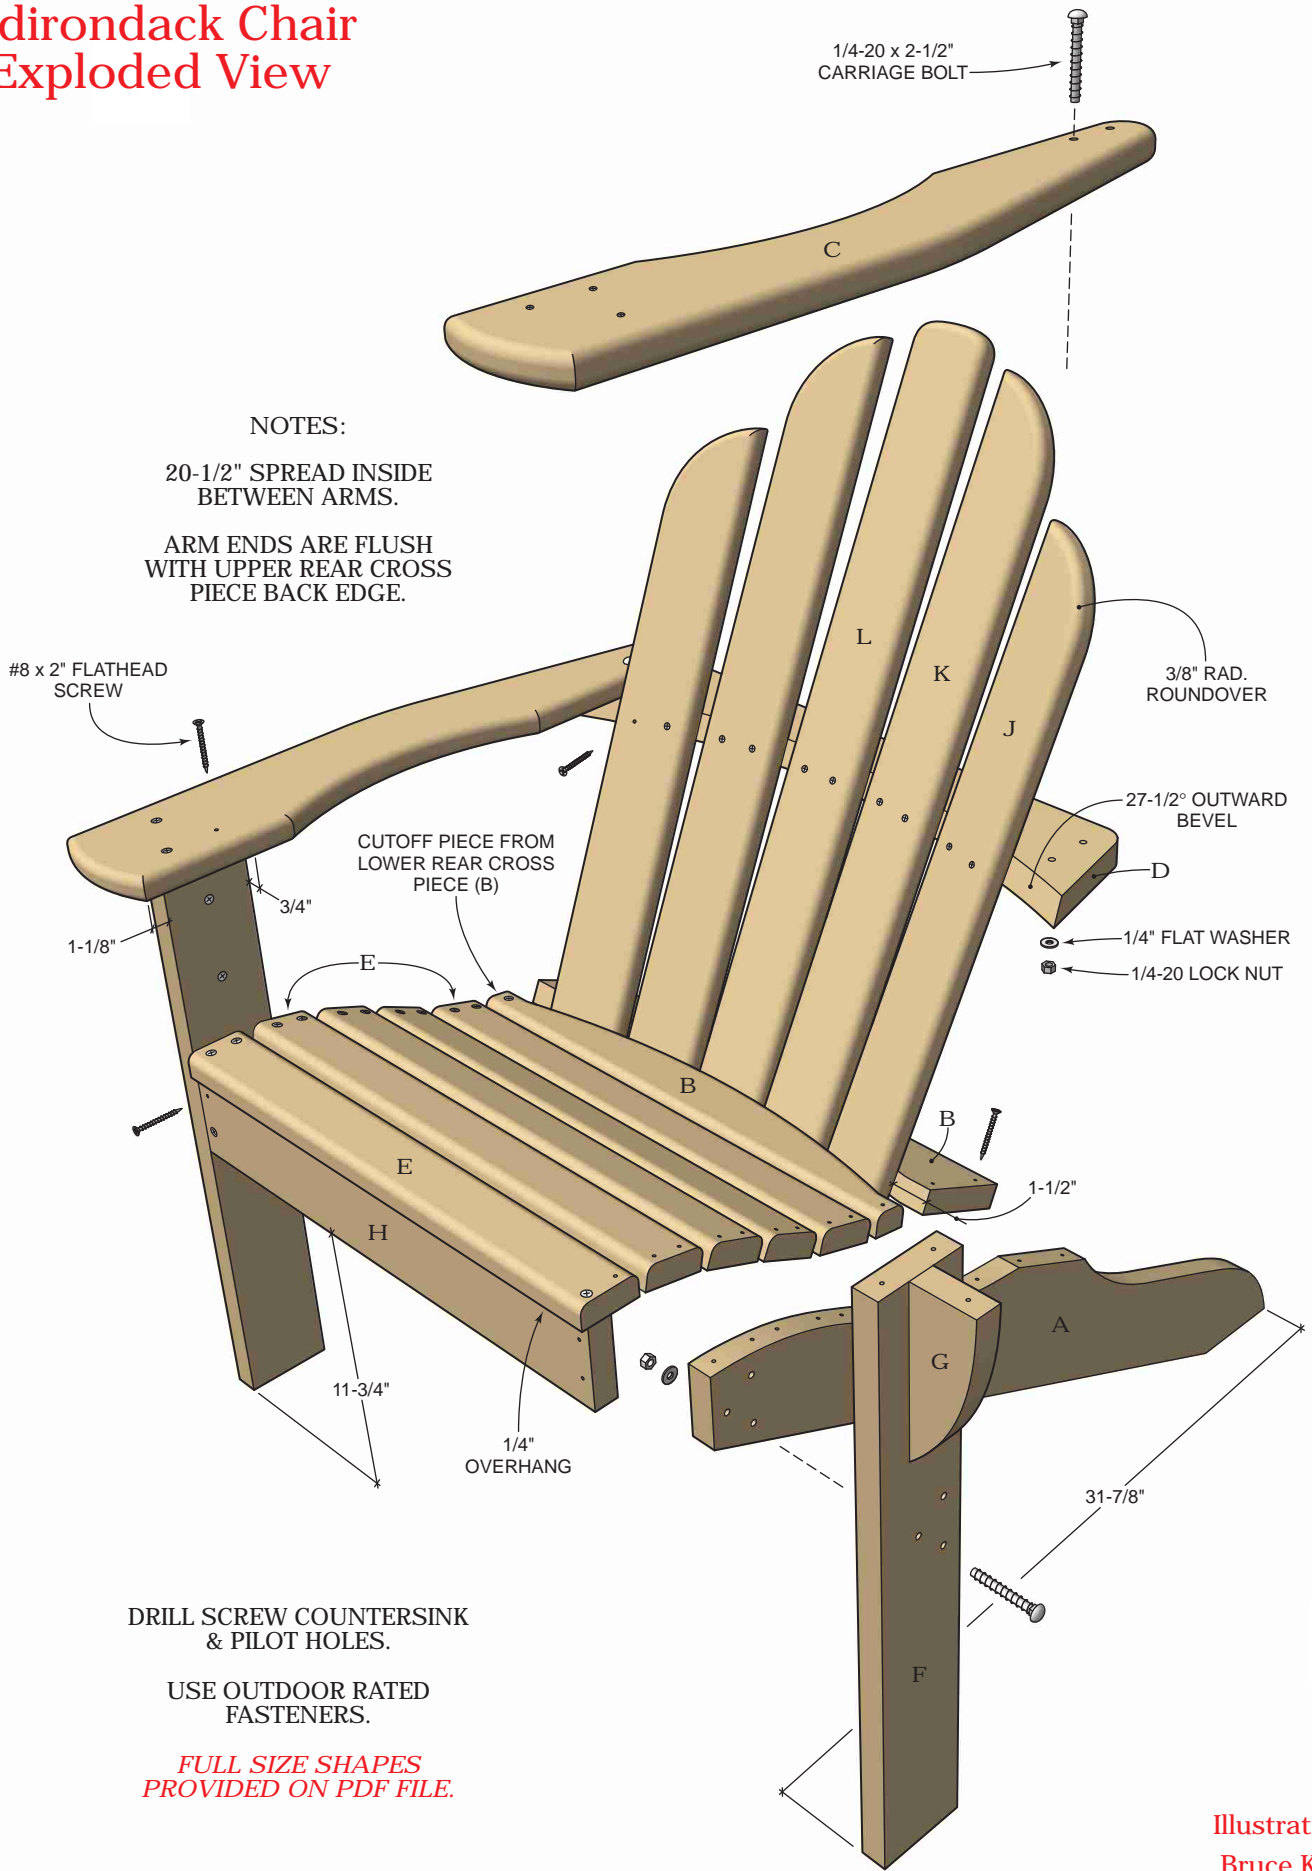

DRILL SCREW COUNTERSINK & PILOT HOLES.

USE OUTDOOR RATED FASTENERS.

*FULL SIZE SHAPES PROVIDED ON PDF FILE.*

Illustration by  
 Bruce Kieffer  
[www.draw.biz](http://www.draw.biz)